

Handheld Nutrunner Applications



 
Hanging Hook	2
Hanging Hook	3
Hanging Hook (Rotary type).....	4
Hanger Arm	5
Hanging Hook Grip End	6
Torque Reaction Plate.....	7
Extra Handle	8
Extra Switch	9
90 Degree Connector Adapter.....	10
Pin Plunger Type	11
Socket Rotation Safety Cover.....	12
Protective Cover	13
Power Cable	14
Compact Flash card.....	14
Conversion Cable.....	14
Bracket	15
Custom	16

Hanging Hook

Angle/Straight



Pistol Grip *included

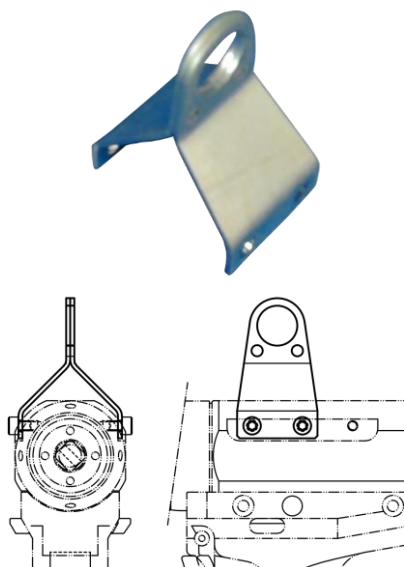


Target Tool Number	Part Number
HFT-015M50-A1-20	HFA-TF01
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	HFA-TF02
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	HFA-TF12
HFT-200M120-A-20	
HFT-300M120-A-20	HFA-TF13
HFT-010M50-S1-20	HFA-TF01
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	HFA-TF02
(HFT-080M80-S-20)	
HFT-055M120-S-20	HFA-TF12
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1	HFA-TF08
(HFT-030M80-P1D)	
HFT-030M120-P1 (-CE)	16H-23018
(HFT-030M120-TP-H)	
HFT-035M80-P1	HFT-TF08
(HFT-035M80-P1-X)	16H-13001-L+E
HFT-050M120-P1 (-CE)	16H-23018
(HFT-060M80-P1)	HFA-TF08
HFT-080M120-P1 (-CE)	16H-23018
HFT-200M120-P1	
(HFT-030M80-DP-H)	-

Hanging Hook


16H-21004



 16H-22023

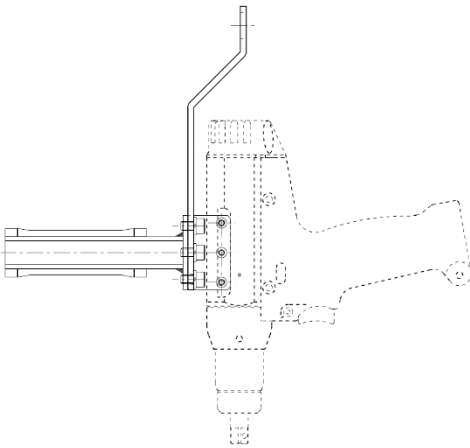


16H-21003

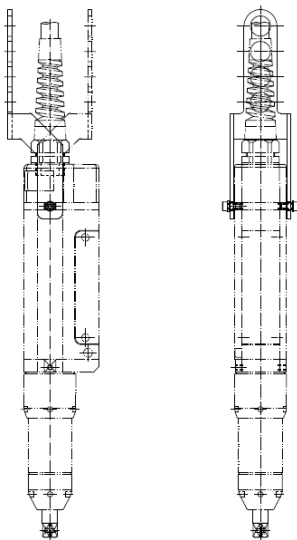 


Target Tool Number	Part Number
HFT-015M50-A1-20 (-CE)	-
HFT-025M80-A1-20 (-CE)	
HFT-040M80-A1-20 (-CE)	
HFT-060M80-A-20 (-CE)	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20 (-CE)	
HFT-130M120-A-20 (-CE)	
HFT-200M120-A-20 (-CE)	
HFT-300M120-A-20 (-CE)	-
HFT-010M50-S1-20 (-CE)	
HFT-015M80-S1-20 (-CE)	
HFT-025M80-S1-20 (-CE)	
HFT-040M80-S1-20 (-CE)	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20 (-CE)	
HFT-090M120-S-20 (-CE)	
HFT-130M120-S-20 (-CE)	
HFT-015M50-P1 (-CE)	16H-21004
(HFT-030M80-P1D)	16H-22023
HFT-030M120-P1 (-CE)	-
(HFT-030M120-P-H)	
HFT-035M80-P1 (-CE)	16H-21004
(HFT-035M80-P1-X)	16H-22023
HFT-050M120-P1 (-CE)	-
(HFT-060M80-P1)	
	16H-21004
	16H-22023
HFT-080M120-P1 (-CE)	-
HFT-200M120-P1 (-CE)	
(HFT-030M80-DP-H)	16H-21003

Hanging Hook (Rotary type)

 Angle

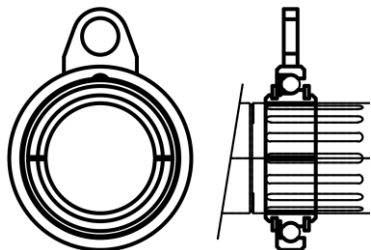


Straight

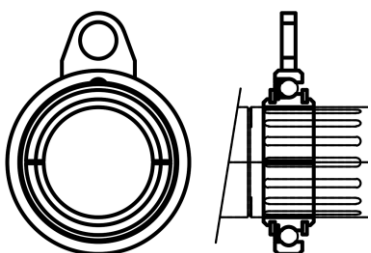 

Target Tool Number	Part Number
HFT-015M50-A1-20	HFA-TF10 (16H-18022+C)
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	16H-23009
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	-
HFT-010M50-S1-20	HFA-TF10 (16H-18022+C)
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	-
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1 (-CE)	-
(HFT-030M80-P1D)	
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	
(HFT-030M80-DP-H)	-

Hanger Arm

 
Angle/Straight

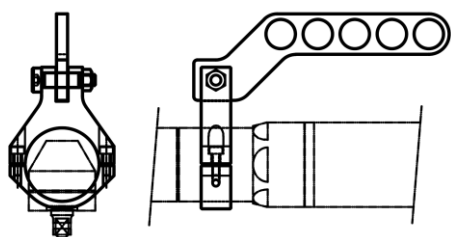

Pistol Grip/Straight (push to start)



 Pistol Grip/Slanted Hanging (16H-23017)

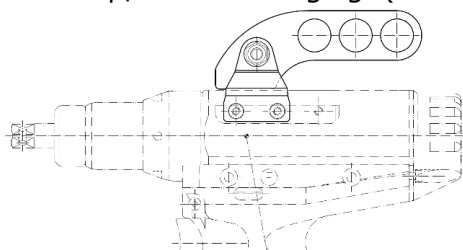


Target Tool Number	Part Number
HFT-015M50-A1-20	HFA-TF04
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	HFA-TF05
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	HFA-TF14
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	-
HFT-010M50-S1-20	HFA-TF04
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	HFA-TF05
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	HFA-TF14
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1 (-CE)	HFA-TF09 16H-23017
(HFT-030M80-P1D)	HFA-TF09
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	
(HFT-030M80-DP-H)	-

Hanging Hook Grip End


Angle/Straight



Target Tool Number	Part Number
HFT-015M50-A1-20	HFA-TF06 HFA-TF07
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	
HFT-010M50-S1-20	HFA-TF06 HFA-TF07
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1 (-CE)	-
(HFT-030M80-P1D)	
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	
(HFT-030M80-DP-H)	

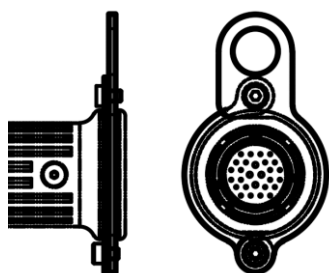 

HFA-TF06

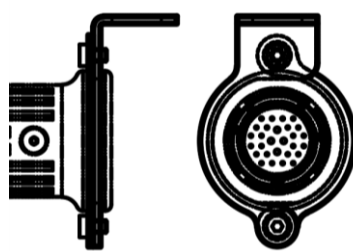 

HFA-TF07

Torque Reaction Plate

Straight *included



Pistol Grip *included



Target Tool Number	Part Number
HFT-015M50-A1-20	-
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	HFA-RP01
HFT-010M50-S1-20	
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	HFA-RP02
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	HFA-RP03
HFT-055M120-S-20	
HFT-090M120-S-20	
HFT-130M120-S-20	-
HFT-015M50-P1 (-CE)	
(HFT-030M80-P1D)	
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	HFA-RP04
(HFT-030M80-DP-H)	

Extra Handle



Straight



Pistol

Target Tool Number	Part Number
HFT-015M50-A1-20	-
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	HFA-HA01
HFT-010M50-S1-20	
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1 (-CE)	16H-22005-G01
(HFT-030M80-P1D)	16H-22005-G02
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	16H-22005-G04
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	-
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	-
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	-
(HFT-030M80-DP-H)	

Extra Switch

Straight




Angle




Target Tool Number	Part Number
HFT-015M50-A1-20	HFA-LL01 (16H-18042+A)
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	
HFT-010M50-S1-20	
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1 (-CE)	
(HFT-030M80-P1D)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	
(HFT-030M80-DP-H)	

90 Degree Connector Adapter

 L type

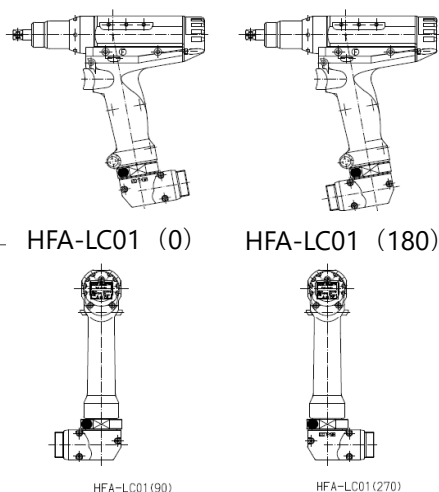

Target Tool Number	Part Number
HFT-015M50-A1-20	HFA-LC01(0) HFA-LC01(90) HFA-LC01(180) HFA-LC01(270)
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	
HFT-010M50-S1-20	HFA-LC01(0) HFA-LC01(90) HFA-LC01(180) HFA-LC01(270)
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1 (-CE)	
(HFT-030M80-P1D)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	HFA-LC01(0) HFA-LC01(90) HFA-LC01(180) HFA-LC01(270)
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	
(HFT-030M80-DP-H)	

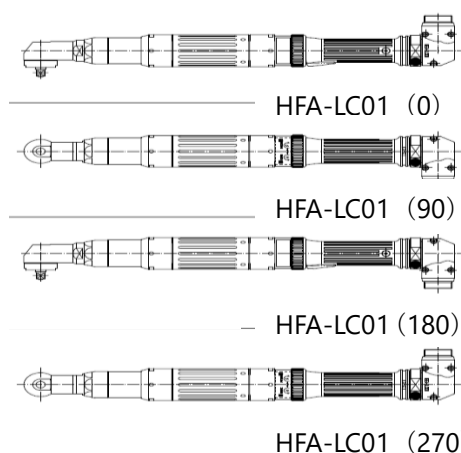 

Pin Plunger Type

Angle/Pistol Grip/Straight/Straight (push to start)




Target Tool Number	Part Number
HFT-015M50-A1-20	UX-620(891-300-1)
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	UX-900(891-304-1)
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	16H-18025+B
HFT-200M120-A-20	
HFT-300M120-A-20	
HFT-010M50-S1-20	UX-620(891-300-1)
HFT-015M80-S1-20	
HFT-025M80-S1-20	
HFT-040M80-S1-20	UX-900(891-304-1)
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	
HFT-090M120-S-20	
HFT-130M120-S-20	UX-620(891-300-1)
HFT-015M50-P1 (-CE)	
(HFT-030M80-P1D)	
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	
HFT-050M120-P1 (-CE)	-
(HFT-060M80-P1)	
HFT-080M120-P1 (-CE)	UX-620(891-300-1)
HFT-200M120-P1 (-CE)	16H-18025+B
(HFT-030M80-DP-H)	UX-620(891-300-1)

Socket Rotation Safety Cover

Angle



 
Straight

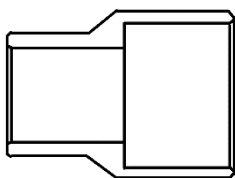

Pistol Grip



 Straight (push to start)

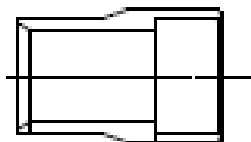

Target Tool Number	Part Number
HFT-015M50-A1-20	Z-8145A(NAC)
HFT-025M80-A1-20	
HFT-040M80-A1-20	16H-20014+A
HFT-060M80-A-20	
(HFT-080M80-A-20)	16H-20015
(HFT-130M80-A-20)	
(HFT-200M80-A-20)	-
HFT-080M120-A-20	16H-20016
HFT-130M120-A-20	16H-20015
HFT-200M120-A-20	16H-18021+A
HFT-300M120-A-20	-
HFT-010M50-S1-20	-
HFT-015M80-S1-20	
HFT-025M80-S1-20	16H-18020
HFT-040M80-S1-20	
(HFT-055M80-S-20)	-
(HFT-080M80-S-20)	
HFT-055M120-S-20	-
HFT-090M120-S-20	
HFT-130M120-S-20	-
HFT-015M50-P1 (-CE)	
(HFT-030M80-P1D)	HFA-HC01 (16H-19011-01)
HFT-035M80-P1 (-CE)	
(HFT-035M80-P1-X)	PIJC32-60(MISUMI)
HFT-030M120-P1 (-CE)	
(HFT-030M120-P-H)	-
HFT-050M120-P1 (-CE)	
(HFT-060M80-P1)	PIJC32-60(MISUMI)
HFT-080M120-P1 (-CE)	
HFT-200M120-P1 (-CE)	-
(HFT-030M80-DP-H)	-

Protective Cover



適応機種	型式/図番
HFT-015M50-A1-20	
HFT-025M80-A1-20	
HFT-040M80-A1-20	
HFT-060M80-A-20	
(HFT-080M80-A-20)	
(HFT-130M80-A-20)	-
(HFT-200M80-A-20)	
HFT-080M120-A-20	
HFT-130M120-A-20	
HFT-200M120-A-20	
HFT-300M120-A-20	
HFT-010M50-S1-20	
HFT-015M80-S1-20	-
HFT-025M80-S1-20	
HFT-040M80-S1-20	
(HFT-055M80-S-20)	
(HFT-080M80-S-20)	
HFT-055M120-S-20	-
HFT-090M120-S-20	
HFT-130M120-S-20	
HFT-015M50-P1	16H-10001-PCA+A
(HFT-030M80-P1D)	-
HFT-035M80-P1	16H-10001-PCB+A
(HFT-035M80-P1-X)	
HFT-030M120-P1	
HFT-050M120-P1	
(HFT-060M80-P1)	-
HFT-080M120-P1	
HFT-200M120-P1	
(HFT-030M80-DP-H)	-

Power Cable

Part Number	Destination	Plug type	Power Voltage	Length[m]	Remarks
-	Japan/USA	A	AC100V	5	Included
E0440152A	Europe	SE	AC200V	5	Option



Included



E0440152A


Compact Flash card



Part Number	Remarks
16G	Memory capacity: 16GB
32G	Memory capacity: 32GB

Conversion Cable

 FUSION to HFC3000II I/O Conversion Cable

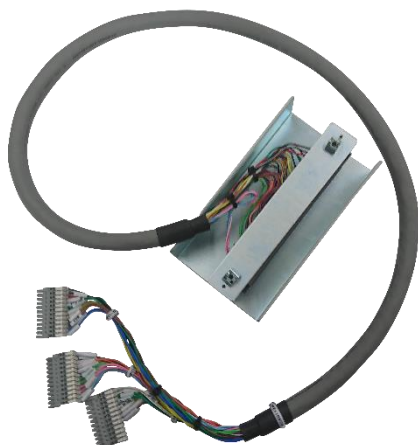

Part Number	Remarks
E0431124C	Conversion cable
16H-17052	bracket

Bracket

Target Tool Number	Part Number	Remarks
HFC-B024A	13T-20001	Table Stand (Angle Adjust)
	16H-18018	Side Mounting
	15T-18007-K01	Rear Mounting
	16H-16017	Table Stand

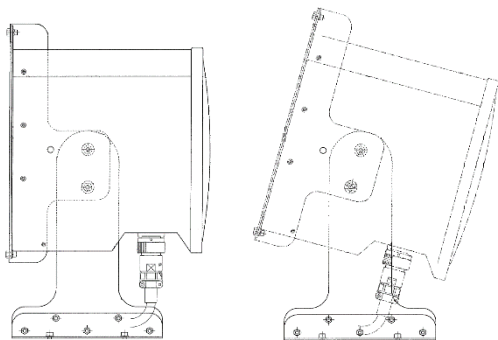 


Table Stand (Angle Adjust)



Rear Mounting



Side Mounting



Table Stand (Fixed)

Custom



 
Crowfoot



Crowfoot



Tube-Nut

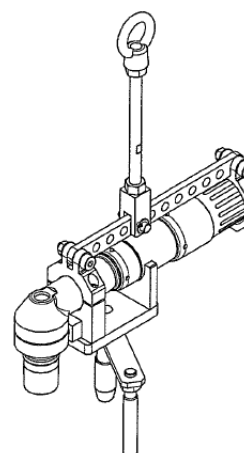

Anti-Torque Reaction Jig



Hold & Drive

NOTE) Specifications and designs of the products are subject to change without notice due to improvements.
NOTE) Ask about accessories not listed in this report



DAI-ICHI DENTSU LTD.

<https://www.daiichi-dentsu.co.jp>
ddksales@daiichi-dentsu.co.jp

Head office: 1-54-1, Shimoishihara, Chofu-City,
Tokyo 182-0034, Japan
Phone: 81-42-440-1465
Fax: 81-42-440-1436

Kani Plant: 690-1, Omori, Kani-City,
Gifu, 509-0238, Japan
Phone: 81-574-62-5865
FAX: 81-574-62-3523